

Changing the filter

- i** After 50 litres of water have flowed through, the filter will cease to work. Your IMPRESSA will automatically prompt you to change the filter.
- i** After two months, the filter will cease to work. Set the date on the date plate on the filter holder in the water tank.
- i** If the CLARIS Blue filter cartridge is not activated in programming mode, you will not be prompted to change the filter.
- i** CLARIS filter cartridges are available from specialised dealers.

Precondition: 'Change the filter' is displayed.

P ▶ Press the P button.

'Maintenance status' ('1/7')

▶ Press the 'Change the filter' button.

'Change the filter'

▶ Press the 'Start' button.

▶ Press the 'Start' button again.

'Change filter'

▶ Remove and empty the water tank.

▶ Open the filter holder and remove the old CLARIS Blue filter cartridge.

▶ Insert a new CLARIS Blue filter cartridge into the water tank, exerting slight pressure.

▶ Close the filter holder. It will click into place audibly.


▶ Fill the water tank with fresh, cold water and reinsert the tank.



▶ Place a receptacle (at least 300 ml) under the fine foam frother.

▶ Press the 'Next' button.

'Switch open'

⊖ ▶ Turn the switch to the  position.

'Filter is being rinsed', water flows out of the fine foam frother.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.
- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically after approximately 300 ml. 'Switch close' appears on the display.

- ⌚ ▶ Turn the switch to the ⌚ position.
'Please select product' appears on the display.
-