

Cleaning the machine

After 180 preparations or 80 switch-on rinses, the JURA will prompt you to clean it.

CAUTION If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: 'Clean machine' is displayed.

- ▶ Press the 'P' button (red Maintenance symbol).
- ▶ Press the 'Start' button.
- ▶ Press the 'Next' button.

'Empty coffee grounds container'

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

'Clean'

- ▶ Place one receptacle under the coffee spout and another under the fine foam frother.
- ▶ Press the 'Next' button.

'Machine is being cleaned', water flows out of the coffee spout.

The operation is interrupted, 'Add cleaning tablet'.

- ▶ Open the cover of the filler funnel for ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
- ▶ Press the 'Next' button.

'Machine is being cleaned', water flows repeatedly out of the coffee spout and the fine foam frother.

The operation stops automatically.

'Empty coffee grounds container'

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.

Cleaning is now complete.

